




Copyright 2010, Ellen Medlock, LLC.

How to Insert A Magnetic Snap Set

Snap Sets available from www.EllenMedlock.com

Please note that these are very general instructions, and more project specific instructions are included in my sewing patterns that call for Magnetic Snap closures. Instructions below take for granted that you have made two centering dots exactly at the location you want your Magnetic Snap closures.

1. Take the two washers that came with the snap set, and place its center hole directly over the two dots respectively- one over the centering dot on the Front Lining Fabric piece and one over the centering dot on the Back Lining Fabric piece. Make sure to hold the washer so that the slots are running straight up and down as in the Diagram.

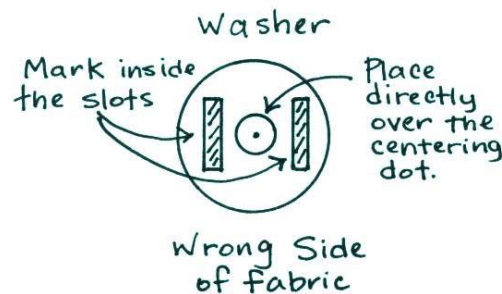

2. Holding the washer securely, still centered over your dot, use the water soluble fabric marking pen, and mark lines through the washer slots onto the fabric.
3. After making these guide marks for each Lining piece, remove the washers, and set them aside.
4. With a craft knife, *CAREFULLY* make a tiny cut through the fabric following the guide marks made with the fabric marking pen. **DO NOT CUT MORE THAN THE LENGTH OF THE MARKS.**
5. Flip the Lining piece over to the **RIGHT** side, and insert the prongs of either magnet part through the slit fabric- one to each Lining piece.
6. Flip the Lining piece over- **WRONG** side up. Now place the washers over the protruding prongs, on top of the fabric. Once the washers are placed over both sets of magnet prongs, bend each set of prongs outward to secure them to the fabric.

